


CJC2138
 4 + 3 PUSH-BUTTONS SQUARE / NO LEDS
 24V AC/DC

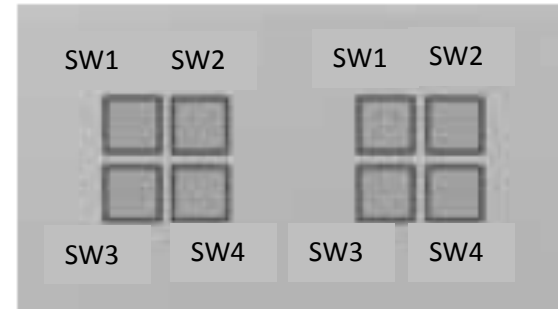

Panel 1		Panel 2	
1	7 SWITCH 4	1	7 SWITCH 4
2	8	2	8
3 COMMON SWITCH	9	3 COMMON SWITCH	9
4 SWITCH 1	10	4 SWITCH 1	10
5 SWITCH 2	11	5 SWITCH 2	11
6 SWITCH 3		6 SWITCH 3	

